 



## SECTION 1 GENERAL

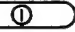


### 1-1. SWITCHING ON/OFF

 
 
After you have completed the basic preparation your TV is ready to be connected to the mains power supply(220V AC, 50Hz).

#### How to turn the TV on

Action	Result
Press  on the TV.	The TV will turn on. <b>Note:</b> If the screen remains blank, the TV may be in the standby mode. Press  on the commander to switch it on.

#### How to turn the TV off




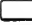

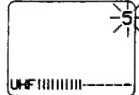

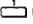


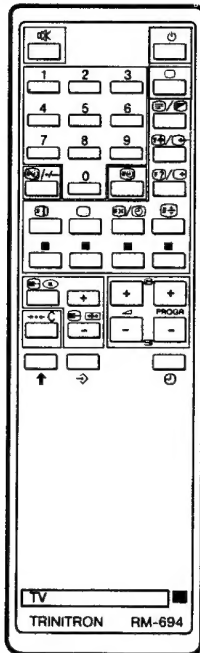
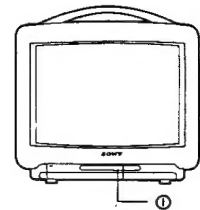










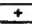

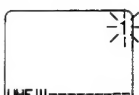
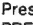
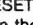

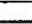


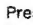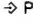A Temporarily	
Press  to enter standby mode.	The TV will be in standby. To return to the TV mode press  .
B Completely	
Press  on the TV.	The TV will turn off.

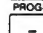
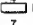


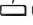
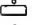
### 1-2. PRESETTING

    After having installed the TV, you now need to preset TV channels. Up to 60 programme positions are at your disposal. For channel presetting use the buttons with the red symbols on the Remote Commander.
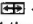
#### Automatic presetting of channels

Action	Result
<b>1</b> Press both the  SHIFT button and the  PRESET button simultaneously.    	 You are now in the preset mode. The programme number flashes.
<b>2</b> Press either the number buttons or PROGR +/- to select the programme number on which you want to preset the channel.             	 The selected programme number will be indicated.
<b>3</b> Press both the  SHIFT button and the  + or - button repeatedly, until the desired channel is tuned in.    	 The scale with the frequency band changes.
<b>4</b> Repeat steps 3 and 4 for all other channels.	
<b>5</b> Press both the  SHIFT and the  PRESET buttons simultaneously to store the channels.    	 All channels are now stored. The programme number stops flashing.

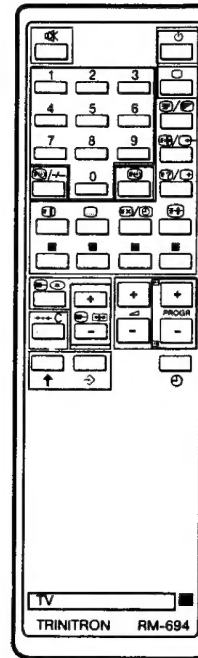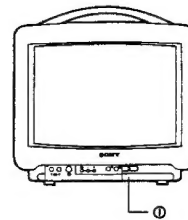

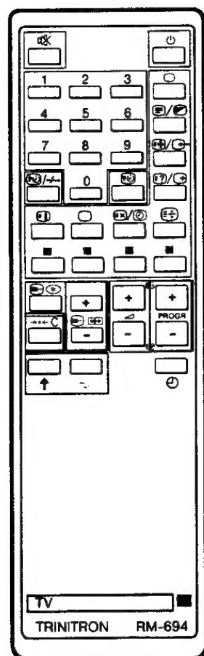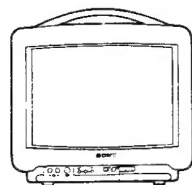

### How to skip programme positions

Since you have 60 programmes at your disposal, you may want to skip vacant programme positions, that means that they are skipped when you press the PROGR +/- buttons.

Action	Result
<b>1</b> Press both the $\uparrow$ SHIFT button and the $\rightarrow$ PRESET button simultaneously. 	<p>You are now in preset mode, the programme position flashes.</p>
<b>2</b> Use PROGR + or - to select the programme position you want to skip. 	<p>The selected programme position appears.</p>
<b>3</b> Press both the $\uparrow$ SHIFT button and the button C simultaneously. 	
<b>4</b> Press both the $\uparrow$ SHIFT button and the $\rightarrow$ PRESET button simultaneously. 	<p>The programme position is now skipped. You are back in TV mode.</p>

 
 
### How to fine tune a channel manually

If the reception of a stored channel is not satisfactory, you can fine tune the channel manually.

Action	Result
Press both the $\uparrow$ SHIFT button and the $\rightarrow$ or $\leftarrow$ button simultaneously until the reception is good. 	The channel is now fine tuned.

**Note:** By pressing the respective programme number the automatic fine tuning will be restored.

## 1-3. TV OPERATION

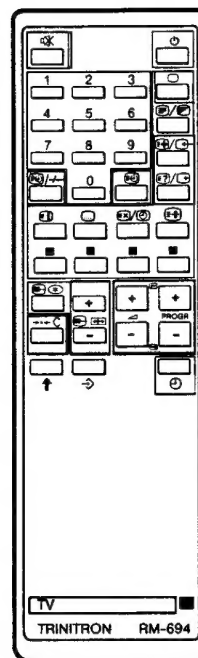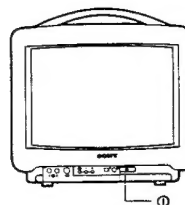

This section shows you how to use the convenient features available for operating the TV.

### How to select programmes

Action	Result
Press PROGR +/- or the respective number button on the Remote Commander. In case of two digit numbers first press +/- and then the two respective number buttons.	The selected programme is displayed.
<b>On the set:</b> Press the + or - button for programme selection.	

### How to adjust the volume

Action	Result
Press $\Delta$ + or -.	The $\Delta$ symbol and the level indicator are displayed on the screen. The volume is adjusted accordingly.
<b>Muting of the sound</b>	
Press button $\text{M}$ .	The sound is switched off. Press the button again to restore the sound.
<b>On the set:</b> Press button $\text{M}$ repeatedly in order to select the desired item, then adjust with the + or - button.	

### How to adjust the picture

Action	Result
<b>1</b> Press button $\text{P}$ repeatedly, until the desired item is displayed ( $\text{C}$ contrast, $\text{I}$ colour intensity, $\text{B}$ brightness).	The symbol and the respective bar display are displayed.
<b>2</b> Press button + or -.	The selected picture item is adjusted accordingly.
Press button $\text{P}$ repeatedly in order to select the desired item, then adjust with the + or - button.	

### To return to factory-set levels

Press the  $\rightarrow$   $\leftarrow$  button.

### Other functions

#### On-screen display

Press the  $\text{O}$  button to display the programme number on the screen and press the button a second time to make it disappear.

#### Selecting the signal of a connected device

Press the  $\text{G}$  button to receive the signal of the device (e.g. a VTR) connected at the VCA connectors (front of the set) or the 21-pin connector (rear of the set). Press the  $\text{O}$  button to return to the TV mode.

#### Time function

 
Press  $\text{T}$  to request the time. Press again to cancel the request (only if teletext is broadcast).

#### Sleep Timer

Press the  $\text{S}$  button repeatedly until the required time period is displayed on the screen (30, 60, 90 minutes or 0 for cancelling the request). In this way you can select the time period after which the set switches itself automatically into standby-mode.

## 1-4. TELETEXT OPERATION (KV-M1431D only)

TV stations broadcast teletext programmes via the TV channels. To receive teletext programmes, use the buttons indicated in green on the Remote Commander.

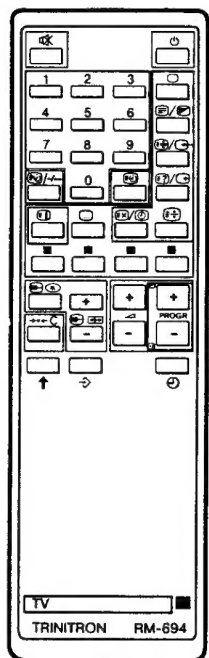

### How to view the teletext

Action	Result
<b>1</b> Select the channel which carries the teletext service you wish to view.	The channel changes on the screen.
<b>2</b> Press .	The teletext service appears.
<b>3</b> Input three digits for the page number using the number buttons. <b>Note</b> If you make a mistake, type in any three digits, then re-enter the correct page number.	The numbers are entered on the screen. The requested page will appear in a few seconds.
<b>To return to the TV mode:</b> Press .  <b>To change the teletext channels:</b> First press  to return to TV mode, then repeat steps 1 to 3.	

#### Note

If the signal of the TV channel is weak, teletext errors may often occur.  
The button has no function on this set.

### How to use the Advanced Features of Teletext

How	Action	Result (on-screen display)
Request the index page.	Press  (INDEX).	The index page appears.
Access the next or preceding page.	Press  (PAGE +) or  (PAGE -).	The next or preceding page appears.

How to	Action	Result
Superimpose the teletext display on the TV programme.	Press  once if you are in text mode, or press  twice if in TV mode. To return to the normal teletext display press  again.	The teletext displays are superimposed on the TV programmes.
Prevent a teletext page from being updated or changed.	Press  (HOLD).  To resume normal teletext reception, press  (TEXT/MIX).	The HOLD symbol  appears on the screen and the chosen sub-page is held until you cancel.
Enlarge the teletext display.	Press  once to enlarge the upper half. Press twice to enlarge the lower half.  Press again to restore the normal display.	The upper half is enlarged.
Reveal concealed information (e.g. answers to a quiz).	Press  (REVEAL).  Press again to conceal the information.	The information is revealed.
Watch the TV programme while waiting for a requested page to be displayed.	1. Request a new page.	The numbers are entered.
	2. Press  (TEXT/CL).	The TV programme is displayed, and the requested page number and other teletext data appear at the top of the screen.
	3. When the requested page has been captured, the page number remains and the other data disappears.	P201
	4. Press  to view this page	The requested page is displayed.

Some of the features may not be available depending on the Teletext service.

### How to use the FASTEXT Feature

FASTEXT feature allows you to access pages quickly with one key operation. When a FASTEXT page is broadcast, a colour coded menu appears at the bottom of the screen. Each coloured prompt corresponds to the four coloured buttons of your Remote Commander.

#### Operation

 
Action	Result
Press one of the coloured buttons which corresponds to the coloured prompt on the teletext.	The selected teletext page appears.

#### Note

Correct FASTEXT operation depends on the necessary signals sent from the TV station. Some TV stations may not send signals for the FASTEXT.

## 1-5. OPTIONAL CONNECTIONS/OPERATIONS

### How to connect additional Audio/video equipment

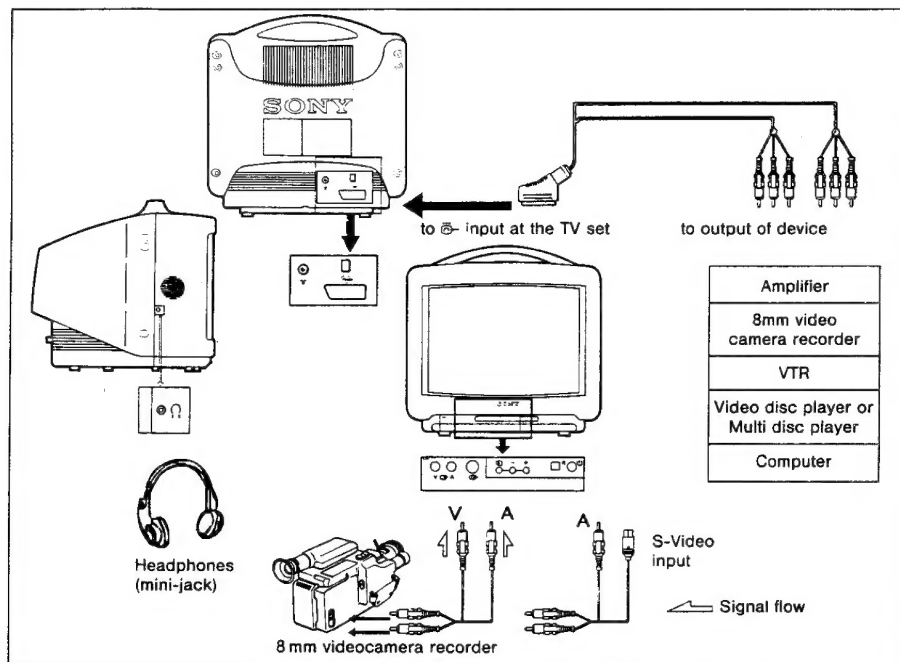

### How to view the Video input signal

Press button repeatedly in order to select the desired input mode ( for Audio/video signals from 21-pin EURO connector or from the video/audio connectors V A on the front; for S-video signals from the S-video (4-pin DIN) connectors on the front). Press button to return to TV mode.

#### On the set:

Press button once, the symbols , , will appear on the screen, then press the + button to select the desired video input mode. Press and + buttons again to return to TV-mode.

#### S-video input (Y/C input)

Video signals may be separated into Y (luminance or brightness) and C (chrominance) signals. Separating the Y and C signals prevents them from interfering with one another, and therefore improves picture quality (especially luminance). This TV is equipped with one S-video input jack through which these separated signals can be input directly.

 
 
#### Notes

- When you have Audio/video equipment connected to both the A/V connectors and the 21-pin terminal, make sure that not both are switched on at the same time, otherwise the picture could be incomplete.
- In case of sound or picture distortions move the VTR away from the TV set.




## 1-6. ADDITIONAL INFORMATION

### Parts Identification


#### TV Set – Front

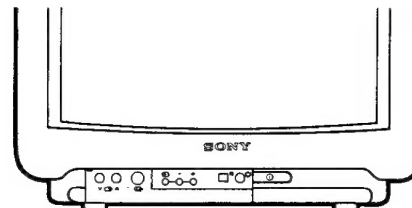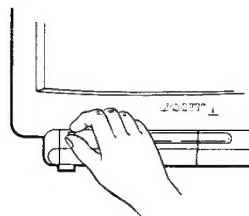

#### TV Set – Rear

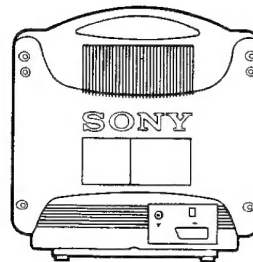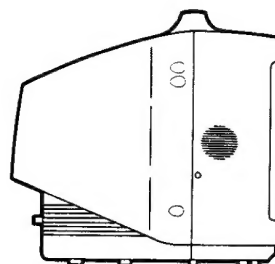   

#### Remote Commander

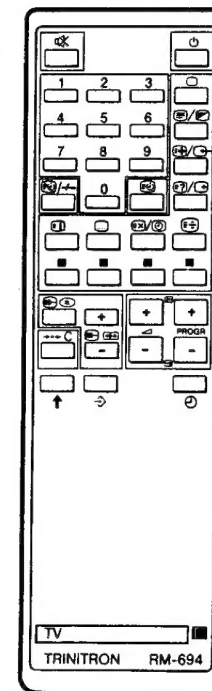 

This section briefly describes the buttons and controls on the TV set and on the Remote Commander. For more information.

## TV Set

Symbol	Function
	Main power switch
	Standby indicator
+/-	Programme selector
+/-	Sound and picture adjustment/input selection
	Headphone jack (mini-jack)
V	Video input jack
A	Audio input jack
	S-video input jack
	21-pin connector (rear of set)
	Aerial socket (rear of set)

## Remote Commander

Symbol	Function
	Button for switching the TV set into standby mode
	Used to return to TV-mode from standby and video input modes
1-9, 0, -/--	Number buttons – in case of two digit numbers first press button -/-- and then two number buttons
PROGR +/-	Programme scanning buttons
and	Preset mode on/off buttons
	Functions only in combination with other buttons
and C	Button for clearing a programme position (in preset mode)
and +/-	Buttons for manual fine tuning of a channel/presetting
	Mute button
	Select button for picture adjustment item
+/-	Buttons for adjusting picture items
	Button for resetting the picture adjustment items to standard
+/-	Buttons for adjusting the volume
	Button for activating the sleep timer
	On/off button for onscreen display
	Time feature (only for KV-M1431D)
	Teletext buttons (only for KV-M1431D)
	FASTEXT Buttons
	Button for selecting the video input mode

### Note:

Buttons not referred to in this index have no function.

## Troubleshooting

Here are some simple solutions to the problems which affect the picture and sound.

Problem	Solution
No picture (screen is dark), no sound	<ul style="list-style-type: none"> <li>Plug the TV in.</li> <li>Press  on the TV. (If  indicator is on, press  or the programme number on the Remote Commander).</li> <li>Check the aerial connection.</li> <li>Check if the selected video source is on.</li> <li>Turn the TV off for 3 or 4 seconds and then turn it on again using .</li> </ul>
Poor or no picture (screen is dark), but sound good	<ul style="list-style-type: none"> <li>Adjust , ,  by pressing the + button after selecting with the  button.</li> </ul>
Good picture but no sound	<ul style="list-style-type: none"> <li>Press .</li> <li>Disconnect the headphones.</li> <li>If  is displayed on the screen, press .</li> </ul>
No colour for colour programmes	<ul style="list-style-type: none"> <li>Adjust  with the + button after selecting with the  button.</li> <li>Press  on the Remote Commander.</li> </ul>
Remote Commander does not function	<ul style="list-style-type: none"> <li>REPLACE THE BATTERIES</li> </ul>

If you continue to have these problems, have your TV serviced by qualified personnel. Never open the casing yourself.